





BU800 Battery Burnishers How To

Prepare for use

<p>1</p>	 <p>Unplug battery charger.</p>  <p>Wrap cord accordingly.</p>	<p>2</p>  <p>Check/inspect bag.</p>  <p>Replace bag if needed.</p>	<p>3</p>  <p>Remove the skirt.</p>
<p>4</p>	 <p>Inspect pad for wear.</p>	<p>5</p>  <p>Turn pad retainer counter clockwise to remove the pad.</p>	<p>6</p>  <p>Install new pad and center on outside diameter of the pad driver.</p>
<p>7</p>	 <p>Tighten pad retainer in clockwise direction.</p>	<p>8</p>  <p>Prep area to remove debris.</p>	<p>9</p>  <p>Turn the key switch to turn the machine on. Check battery power.</p>
<p>10</p>	 <p>Palm buttons power the pad drive and causes the pad to spin and lower to the floor (<i>models without traction</i>).</p>	<p>11</p>  <p>Turn on pad power switch. Press palm buttons to drive machine and lower pad to the floor (<i>traverse models</i>)</p>	<p>12</p>  <p>Press the speed control button to adjust traverse speed.</p>  <p>Press the reverse button while pressing palm buttons to move the machine in reverse</p>





BU 800 Battery Burnishers How To

Store the Machine

<p>1</p>	 <p>Wipe machine exterior after each use.</p>	<p>2</p>	 <p>Plug machine in appropriate outlet to charge batteries.</p>	<p>3</p>	 <p>Remove the cover to expose batteries for ventilation.</p>
-----------------	--	-----------------	---	-----------------	--

BU800 Battery Burnishers How To

Maintenance

<p>1</p>	 <p>Charge batteries daily. Check each battery cell's water level, add water if needed.</p>	<p>2</p>	 <p>Check/Replace Dust Bags.</p>	<p>3</p>	 <p>Check/Replace Skirt</p>
<p>4</p>	 <p>Clean Pad. Replace as needed.</p>	<p>5</p>	<p>Monthly Maintenance</p> <p>Lubrication and Check/Service Pad Motor Brushes</p>	<p>6</p>	<p>Yearly Maintenance</p> <p>Service Drive Motor Brushes</p>